

TAU - 7 CO₂ MATCH PISTOL

SPARE PARTS LIST

Position	Description
01	Receiver
02	Breech
03	Barrel
04	Trigger Guard
05	Container
06	Front Sight Base
07	Front Sight
08	Collar Weight
09	Conic Collar Weight
10	Breech Locking Piece
11	Locking Piece Pin
12	Push Button
13	Rear Sight Mount
14	Rear Sight Leaf Holder
15	Rear Sight Leaf
16	Elevation Adjustment Piece
17	Rear Sight Adjustment Screw
18	Serrated Screw Head
19	Support Block
20	Adjustment Screw - Velocity
21	Internal Hammer
22	Trigger Lever
23	Sear
24	Trigger Base
25	Trigger
26	Hammer Stop
27	Control Valve
28	Gasket
29	Distance Ring - Valve
30	Screw Plug
31	Ring Nut - Grip
32	Needle - Container Cap

Position	Description
33	Nut - Container Cap
34	Counter Weight Carrier
35	Counter Weight
36	Forend Insert
37	Grip Insert Right/Left
38	Tubular Spanner
39	Forend
40	Grip
41	Breech Pin
42	Trigger Base Pin
43	Push Button Pin
44	Front Sight Screw
45	Forend Screw
46	Adjstmen Screw - Trigger Pull Weight
47	Trigger Adjustment Screw
48	Trigger Screw
49	Rear Sight Leaf Screw
50	Steel Ball
51	Circlip
52	Washer - Container Cap
53	Washer /belongs to po. 46/
54	Hammer Spring
55	Trigger Lever Spring
56	Sear Spring
57	Trigger Base Spring
58	Valve Spring
59	Locking Piece Spring
60	Rear Sight Base Spring
61	Plunger Spring
62	O-Ring /Breech/
63	O-Ring /belongs to pos. 26/
64	O-Ring /belongs to pos. 30/
65	O-Ring /belongs to pos. 32/
67	Spring /belongs to pos. 47/

