


Deutsch

Hämmerli Standardpistolen und Jägerschaftspistolen sind für normale Patronen im Kaliber .22 long rifle konstruiert. Bitte benutzen Sie keine High-Velocity Munition, da Ihre hochwertige Pistole dadurch beschädigt werden könnte.

Hämmerli Standard Pistols and Hunter's Pistols are constructed for the use of normal ammunition in calibre .22 long rifle. Please do not use any high velocity ammunition as your accurate target pistol might suffer damage.

Les pistolets Hämmerli Standard et les pistolets mod. Chasseur sont construits pour une munition normale .22 long rifle. Il est recommandé de ne pas utiliser de la munition forte, comme p. ex. «High-Velocity».

Las pistolas Hämmerli Standard y de Caza son construidas para el uso de municion normal del cal. .22 long rifle. Se le rogamos de no utilizar municion tipo fuerte como «high velocity».

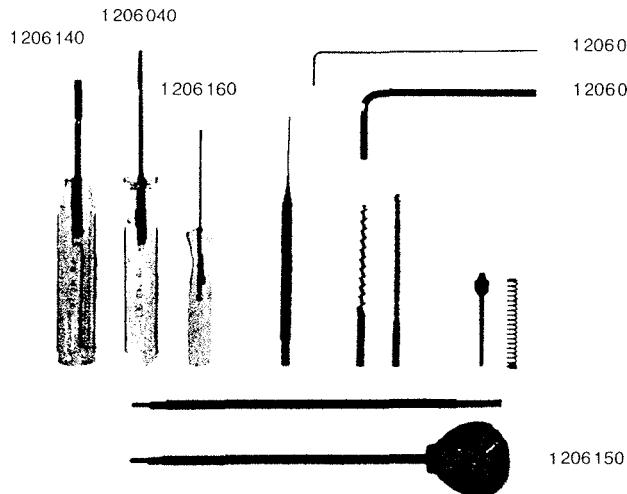

Lesen Sie die nachfolgenden Ratschläge vor dem Auspacken und der Übernahme Ihrer neuen Hämmerli-Standardpistole.

I. Überprüfen der Pistole nach Erhalt

Trotz denkbar sorgfältiger Verpackung war Ihre Pistole auf dem Transport vielen Gefahren ausgesetzt. Erschütterungen, Stöße und unsachgemäße Behandlung durch Zollorgane können bei einer so hochwertigen Waffe die Ursache von später auftretenden Störungen sein. Prüfen Sie deshalb Ihre Pistole sofort nach Erhalt auf einwandfreien Zustand nach folgenden Richtlinien:

1. Ist die Verpackung noch in Ordnung, oder weisen Spuren auf starke Schläge oder Stöße hin?
2. Griffsschalen.
3. Allg. Aussehen der Waffe.
4. Korn und Visier inkl. Visieraufbau.
5. Sind die folgenden Zubehöre vorhanden: Putzstock, 3 Schraubenzieher, 2 Inbusschlüssel, Ersatzschlagfeder, Ersatzzündstift, 1 Durchschlag, Reservemagazin?
6. Funktionskontrolle gemäss Abschnitt II.

Melden Sie allfällige Schäden, die Sie festgestellt haben, sofort dem Postamt oder dem Spediteur und verlangen Sie eine entsprechende Schadenbestätigung. Diese ist uns zuzustellen, worauf wir unverzüglich die erforderlichen Schritte für eine kostenlose Schadenbehebung einleiten.

English


You will do well to read the following instructions before unpacking and using your new Häggerli Standard Pistol.

I. Checking the pistol upon receipt


Despite the most careful packing, your pistol has been exposed to many hazards during transit. Violent jarring and knocking en route and improper handling during treatment by Customs officials may well result in subsequent functional defects in a weapon of such high quality. Therefore, you should check the condition of your pistol immediately upon receipt by having due regard to the following directives:

1. Condition of the package; evidence of damage occasioned by hard blows or knocks.
2. Appearance and condition of the grips.
3. General appearance of the weapon.
4. Condition of front and rear sight, incl. the sight mounts.
5. Inclusion of complete set of accessories: cleaning rod, 3 screwdrivers, 2 allen keys, spare main spring, spare firing pin, 1 punch, and spare magazine should all be present.
6. Checking of functional condition as directed in Section II.

Any damages or faults which you may have found upon receiving the weapon and accessories should *at once* be reported either to the postal authorities or else to the forwarding agents, and a demand should be made for a corresponding confirmation of such damage. The confirmation should then be forwarded to us, so as to enable us to take immediate steps in order to facilitate a free-of-cost reparation by which to offset any resultant shortcomings.

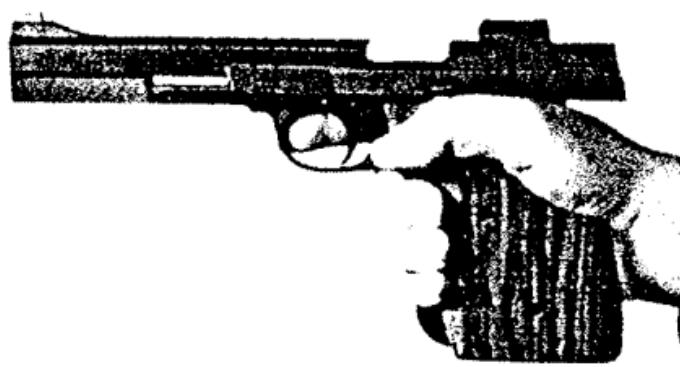


1

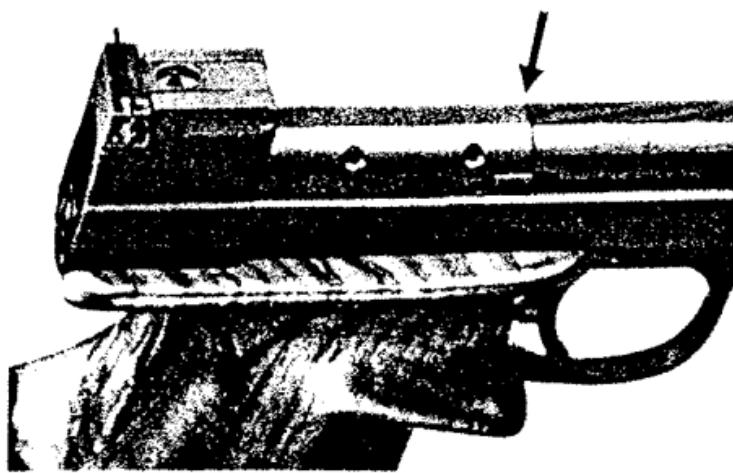

2



3

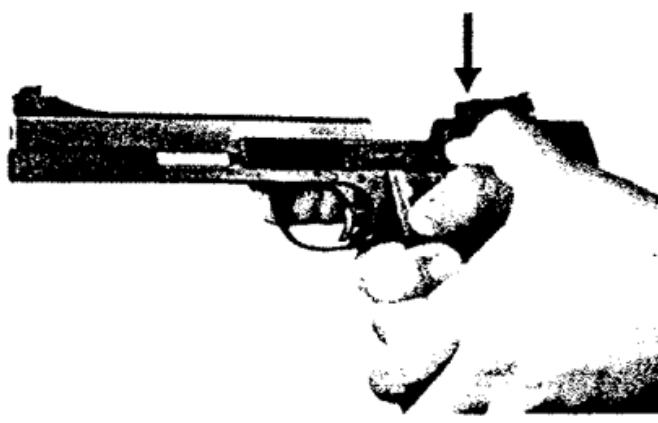

4

4

English

II. Checking the functional condition of the weapon

Check the proper functioning in the following order:

1. Loading (Illustration 1)

Remove the magazine by pressing the magazine holder catch (1201360) backwards. Push the breech (1202101) back and allow same to return forward into the "closed" position. The breech must fit tightly onto the barrel by the force of the return spring and without external help (Illustration 2). Such manipulative checking should, however, not be repeated unnecessarily, as otherwise the extractor may damage the rim of the chamber if the breech be frequently moved by hand while the weapon is empty.

2. Firing

Squeeze the trigger. The release and the impact of the hammer must both be audible.


3. Breech catch

The Hämmerli Standard pistol is fitted with a breech catch (1201420) which holds the breech open after the last round in the magazine has been fired.

Insert the empty magazine. "Loading" operation—pull breech back. The breech (slide) must now be caught and held open by the breech catch (Illustration 3). Release the breech by depressing the breech catch (1201420) (Illustration 4).

4. Unloading

On terminating the actual shooting, remove the magazine (1204000) and move the breech vigorously (this will extract and eject any round which may still be in the chamber), then press the trigger (whilst pointing the weapon at the target) and insert the empty magazine.

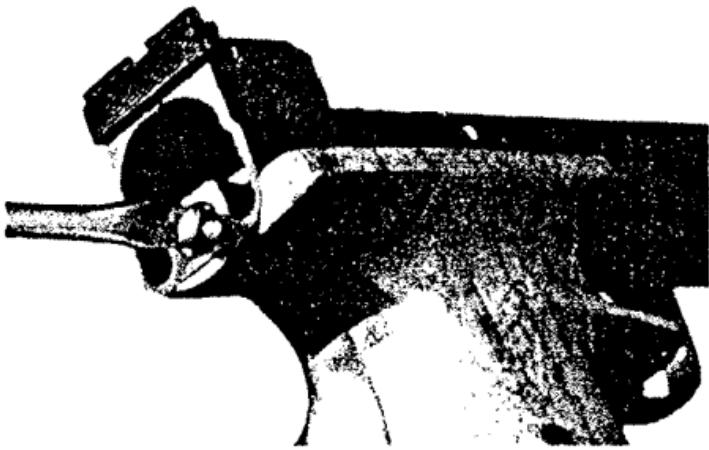

5



6



7



8

6

English

III. Dismantling the weapon

A. Taking down

(for maintenance and cleaning)

1. Remove the magazine.
2. Unload.
3. Loosen screw (1200 020) and remove the complete rear-sight assembly by pulling the latter out backwards (Illustration 5).
4. Remove the barrel weight by loosening the screw (1200 060) (Illustration 6).
5. Remove the slide (1202101) thus : Hold the pistol with the right hand, pull the trigger guard fully downwards, and push this to the left with the right index finger. Now pull the slide back to the full extent of its travel, lift it up, and let it glide forward so as to leave the barrel freely (Illustration 7 and 8).

B. Total dismantling

(to effect all changes of component parts and to carry out repairs).


- 1.-5. Proceed as directed for taking down, then:
6. Remove the grip pieces.
7. Release the hammer by pressing the trigger.



9




10

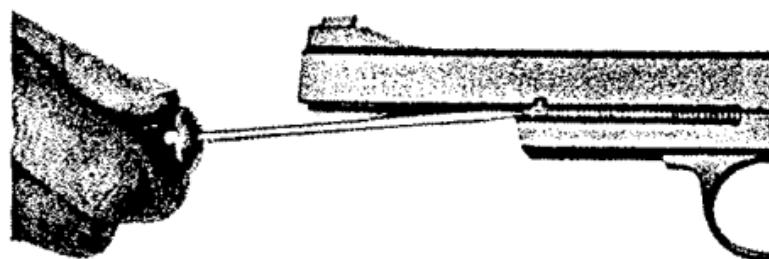

11

English

8. Lift the magazine holder (1201360) out of the frame unit by means of a screwdriver (Illustration 9).
9. Remove the hammer pin (1201400) by means of a flat punch.
10. Remove the hammer (1201390) complete with the hammer bar (1201370) by pulling this unit upwards.
11. Withdraw the pin (1201340) and remove the trigger nose (1201280).
12. Lift the trigger arm (1201190) gently out of its well (when re-assembling, insert the trigger spring into the appropriate recess).
13. Withdraw the pin (1201330) by means of a suitable punch and remove the trigger (sear) spring (1201290).
14. To remove the ejector, push the recoil (return) spring (1201260) forward with the aid of a small screwdriver, then withdraw the ejector upwards (Illustration 10).
15. To remove the recoil spring (1201260) push the recoil spring guide (1201240) app. 5 mm back, turn by 90° and remove both (Illustration 11).
16. To remove the trigger guard, knock out the trigger guard axle pin (1201050).

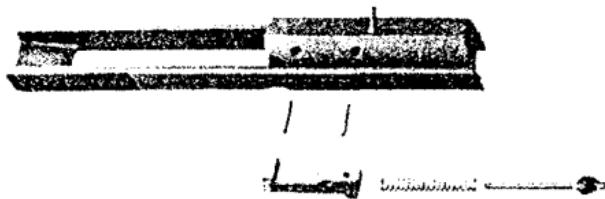

English


17. To remove the firing pin, knock out the holding pin (1202090) from below and withdraw the firing pin and the spring. (When re-assembling, see that the milled recess coincides with the pin hole). (Illustration 12).
18. To disassemble extractor, remove pin (1202150) from below using punch.
19. To change the rear-sight blade, remove the elevation screw (1203130) and, whilst doing this, take care of the click pin (1203110) and the click-pin spring (1203100). Then, having placed the part on a suitable support, knock out the tension pin (1203170) and remove the rear-sight blade together with the adjustment screw.
20. Changing the front sight: Knock out in direction of the muzzle using a hammer with some damping material (wood or plastic) in between.
21. To dismantle the magazine, push the magazine-base holder inwards, then knock the extension piece forward and remove. The magazine-base holder and the magazine spring may thus also be removed.
22. To dismount breech catch, (the end of the screw (1201440) has been slightly tapped over the nut (1201450), then use the allen key (1206020) to remove the screw from the right-hand side of the frame (take care of spring). (1201460)

2.

1.

4.

3.

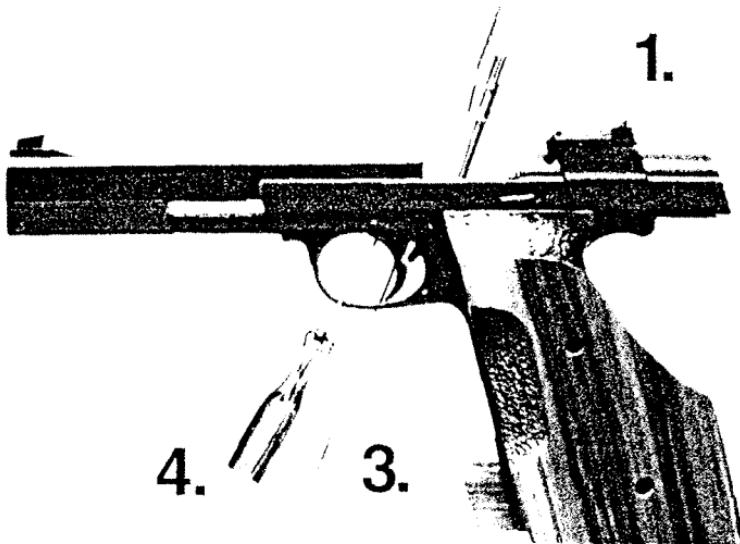

English

IV. Use and handling



a) Trigger

Starting with serial No. 40335 (models 208/211 or serial No. 67589 (models 214/215), the standard pistols are now equipped with a redesigned trigger system. **The trigger pull weight is the sum of the trigger slack force plus the trigger pull force.** (1. + 3.). If, for example, the trigger slack force is increased, the trigger pull weight also increases. The sear engagement is not adjustable.

The new trigger offers the following adjustment possibilities:

(Pos. 1. and 2. with open breech)

1. **The trigger pull force** can be increased by turning the allen key (size 1,5 mm) No. 1206020 clockwise or decreased by turning it counterclockwise.
2. **The trigger pull travel** has been optimally adjusted by the factory. It can be extended by turning the screwdriver 1206140 clockwise or shortened by turning it counterclockwise.
3. **The trigger slack force** can be increased by turning the allen key (size 1,5) No. 1206020 clockwise or decreased by turning it counterclockwise.
4. **The coupling creep** between the trigger bar and the sear can be increased by turning the small screwdriver 1206160 clockwise or decreased by turning it counterclockwise. Ensure that some creep can be felt.

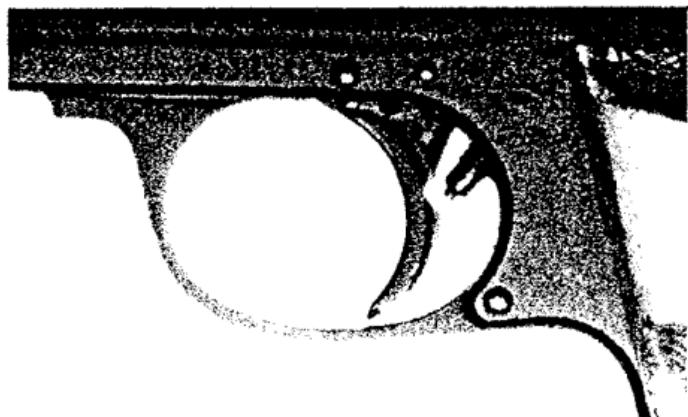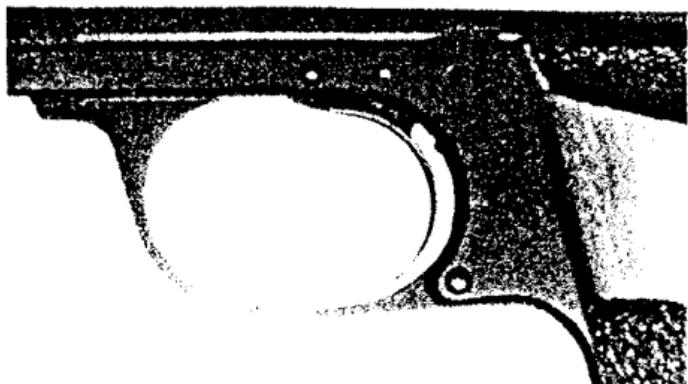

English

b) Trigger latch short compl.

Ideal to use if you have short fingers

Order No. 1201691

Consisting of: 1 trigger latch,

2 pins 1201140, 1 screw 1201171,

1 spring 1201152, 1 spring 1201162

*(Order No. for trigger latch standard
compl.: 1201681)*

Instructions for assembly of the trigger latch

1. Dismantle according to par. III B, 1.-7.
of the instruction manual
Then dismantle in the following order:
2. Trigger sear 1201190/191 with spring
1201220
3. Pin 1201180
4. Spring 1201150/152
5. Pin 1201120
6. Pull trigger guard fully downwards and
remove trigger latch
7. Slightly lubricate new trigger latch and
assemble in reversed order (For slide
assembly hammer must be in cocked
position)
8. Trigger adjustment according to par. IV
of the instructions.

English

Any corrections on internal component parts (trigger arm, sear, hammer etc.) intended to correct the trigger weight still further, must be avoided. We must decline to accept responsibility for any resultant faults in the functioning of the weapon.

c) Magazines

Capacity: Cal. .22 long rifle 8 rounds

Before inserting the filled magazine in the pistol, pull the slide knob downwards two or three times and let it glide back by itself. This would obviate a possible jamming of the rounds in the magazine and aid trouble-free feeding.

Shape and substance of the magazine lips determine the correct feeding of the cartridges into the chamber. Careful treatment of the magazines serves to avoid anger.

English

d) Ammunition

Constant use of the type of ammunition which you may have found to give consistently good results will help you to enjoy trouble-free shooting and ensure unvariedly good placing of your shots. Please do not use any high velocity ammunition.

e) Ignition

Should the Hämmerli International Standard Pistol after prolonged use fail to fire properly (weak striker impact), the main spring (1201380) or firing pin (1202080) should be changed.

f) Sight correction

A correction of 1 click represents a shift 10 mm in the position of the point of impact at a given shooting distance of 25 m (at 50 m, 1 click = 20 mm).

Adjustments:

High shots:

Turn screw (1203130) clockwise.

Low shots:

Turn screw (1203130) anticlockwise.

Right shots:

Turn screw (1203090) anticlockwise.

Left shots:

Turn screw (1203090) clockwise.

English

g) Cleaning

After every 1000 shots or so, take down as directed en Section III/A, 1-5, to clean the pistol and the barrel thoroughly.

Clean the slide and the upper parts of the frame unit with a thin oil (sewing-machine oil, Vaseline oil, etc.) and lubricate lightly.

Clean the barrel with a cleaning rod by using either cotton wool, waste, flannel, or soft cotton patches and apply a thin film of high-quality gun oil to the bore.

Clean the magazine with paraffin, or pure benzine, then oil the feeder platform and the slide knob lightly.

Gun oil should be applied only to the bore an the external parts of the pistol. To lubricate the gliding internal parts, use a non-resinous sewing-machine-, vaseline- or spindle oil.

English

h) Spare Parts

All spares are readily available from Messrs. Häggerli Ltd., Target Arms, 5600 Lenzburg, Switzerland. Your national Häggerli Agent will also carry stocks of the more generally required spares.

Important: Whenever ordering spares, please state the number of the part required as well as the serial number of the pistol itself.

You may, of course, send in your Häggerli pistol to our Works at Lenzburg at any time, either for a thorough check-up or, if necessary, for repairs.


We should, of course, be very pleased to receive from you reports regarding your results achieved with the Häggerli Standard Pistol.

We will gladly forward to you copies of our House Journal 'Häggerli News' if you wish to know more about our firm. You would thus be kept in constant touch with us and always learn further interesting facts relating to the gunsmiths of the world's best marksmen.

We will be pleased to forward to you upon request our folders giving you all details on the Häggerli rapid fire and Free pistols.

* 1 202 001 compl
** 1 222 001 compl

1 203 000
** 1 223 000

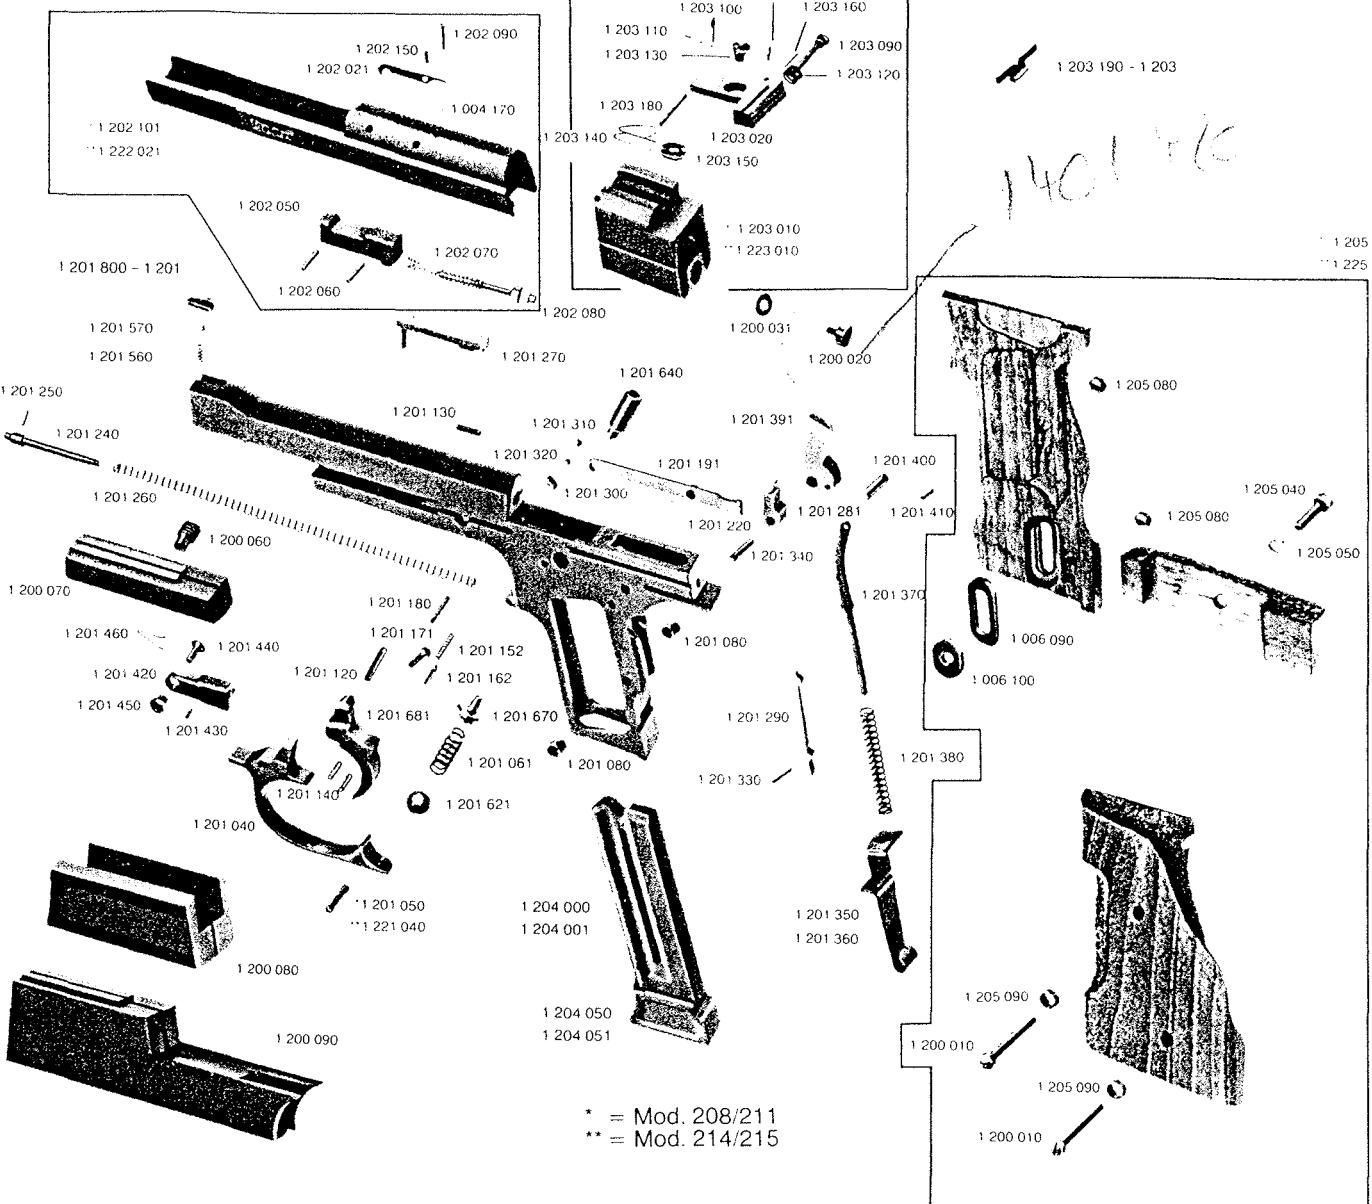

Deutsch

1 004 170	Druckfeder
1 006 090	Metalleinlage
1 006 100	Mutterscheibe
1 200 010	Griffschalenschraube
1 200 020	Befestigungsschraube
1 200 031	Fächerscheibe
1 200 060	Schraube zu Vordergewicht
1 200 070	Vordergewicht normal 80 g
1 200 080	Vordergewicht schwer 200 g
1 200 090	Vordergewicht extra schwer 300 g
1 201 040	Abzugbügel
1 201 050*	Stift zu Abzugbügel
1 201 061	Abzugbügelfeder
1 201 080	Büchse
1 201 120	Abzugstift
1 201 130	Triggerstop-Schraube
1 201 140	Sicherungsstift
1 201 151	Abzugsgewichtfeder für 1 201 630
1 201 152	Abzugsgewichtfeder
1 201 162	Abzugsgewicht-Versettschraube
1 201 163	Abzugsgewicht-Versettschraube für 1 201 691
1 201 171	Abzug-Versettschraube
1 201 180	Abzuganschlagstift
1 201 191	Abzugstange komplett
1 201 220	Abzugstangen-Feder
1 201 240	Federbolzen
1 201 250	Spannstift
1 201 260	Vorholzfeder
1 201 270	Auswerfer
1 201 281	Stollen
1 201 290	Stollenfeder
1 201 300	Stollenfeder-Schraube
1 201 310	Gewindestift
1 201 320	Nylonstift
1 201 330	Stift zu Abzugstollenfeder
1 201 340	Abzugstollenstift
1 201 350	Magazinhalter für Pistole mit Standard-Griffschalen
1 201 360	Magazinhalter für Pistole mit verstellbaren Griffschalen
1 201 370	Schlagstange
1 201 380	Schlagfeder
1 201 391	Hahn
1 201 400	Hahnbolzen
1 201 410	Hahn-Zylinder-Stift
1 201 420	Sperrstück
1 201 430	Spannstift
1 201 440	Senkschraube
1 201 450	Spezial-Mutter
1 201 460	Schenkelfeder
1 201 560	Feder

English

spring
metal insertion
nut disc
screw for grip plates
fixing screw
washer
screw
weight normal 80 g
weight heavy 200 g
weight extra heavy 300 g
trigger guard
pin for trigger guard
trigger guard spring
annulus
trigger pin
pin
pin
spring for 1 201 630
spring
trigger screw
screw for 1 201 691
screw
pin
trigger bar
trigger bar spring
spring pin
pin
recuperator spring
ejector
sear
sear spring
screw for sear
pin
pin
pin
sear pin
magazine holder for pistol with std. grips
magazine holder for pistol with adj. grips
hammer strut
main spring
hammer
bolt for hammer
pin
blocking piece
pin
screw
nut
spring
spring

Deutsch

1 201 570	Kugel Ø 4 mm
1 201 621	Kugel
1 201 640	Druckstück kompl.
1 201 670	Sicherung
1 201 681	Abzugzunge kompl.
1 201 691	Abzugzunge kurz kompl.
1 201 800	Blockkorn 1,8/8 mm
1 201 810	Blockkorn 2,0/8 mm
1 201 820	Blockkorn 2,2/8 mm
1 201 830	Blockkorn 2,4/8 mm
1 201 840	Blockkorn 2,6/8 mm
1 201 850	Blockkorn 2,8/8 mm
1 201 530	Blockkorn 3,2/8 mm Standard
1 201 540	Blockkorn 3,6/8 mm
1 201 550	Blockkorn 4,0/8 mm
1 201 470	Blockkorn 3,2/9 mm
1 201 480	Blockkorn 3,6/9 mm
1 201 490	Blockkorn 4,0/9 mm
1 201 580	Blockkorn 4,4/8 mm Spezial
1 201 590	Blockkorn 4,4/7 mm Spezial
1 202 001*	Verschluss kompl.
1 202 021	Auszieher
1 202 050	Zündschlösschen
1 202 060	Spannstift
1 202 070	Schlagbolzenfeder
1 202 080	Schlagbolzen
1 202 090	Haltestift
1 202 101*	Verschluss-Stück
1 202 150	Zylinder-Stift
1 203 000*	Visier kompl.
1 203 010*	Visierträger
1 203 020	Visierblatt-Träger
1 203 090	Seitenstellschraube
1 203 100	Rastfeder
1 203 110	Rastbolzen
1 203 120	Visierblattfeder
1 203 130	Höhenstellschraube
1 203 140	Druckfeder
1 203 150	Höhenstellmutter
1 203 160	Stift 1 x 10
1 203 170	Stift 1,5 x 6
1 203 180	Zylinderstift 2 x 20
1 203 190	Visierblatt ohne Kimme
1 203 250	Visierblatt 1,8 mm
1 203 260	Visierblatt 2,0 mm
1 203 270	Visierblatt 2,2 mm
1 203 280	Visierblatt 2,4 mm
1 203 290	Visierblatt 2,6 mm
1 203 300	Visierblatt 2,8 mm

English

ball Ø 4 mm
ball
pressure piece
safety
trigger latch compl.
trigger latch short compl.
front sight rect. 1,8/8 mm
front sight rect. 2,0/8 mm
front sight rect. 2,2/8 mm
front sight rect. 2,4/8 mm
front sight rect. 2,6/8 mm
front sight 2,8/8 mm
front sight 3,2/8 mm standard
front sight 3,6/8 mm
front sight 4,0/8 mm
front sight 3,2/9 mm
front sight 3,6/9 mm
front sight 4,0/9 mm
front sight 4,4/8 mm special
front sight 4,4/7 mm special
breech compl.
extractor
support for firing pin
pin
spring for firing pin
firing pin
pin
breech
pin
rear sight compl.
support for rear sight
rear sight leaf
adj. screw for windage
spring for click
bolt for click
spring
adj. screw for elevation
spring
nut for adj. of elevation
pin
pin
pin
rear sight blade without notch
rear sight blade 1,8 mm
rear sight blade 2,0 mm
rear sight blade 2,2 mm
rear sight blade 2,4 mm
rear sight blade 2,6 mm
rear sight blade 2,8 mm

Deutsch

1 203 030	Visierblatt 3,2 mm		Standard
1 203 040	Visierblatt 3,6 mm		
1 203 050	Visierblatt 4,0 mm		
1 203 230	Visierblatt 4,2 mm		
1 203 240	Visierblatt 4,4 mm		
1 203 060	Visierblatt 3,2 mm		
1 203 070	Visierblatt 3,6 mm		
1 203 080	Visierblatt 4,0 mm		
1 204 000	Magazin kompl. für Standard-Griffschale		
1 204 001	Magazin kompl. für verstellbare Griffschale		
1 204 010	Magazinfeder		
1 204 031	Zubringter		
1 204 050	Magazinverlängerung für Standard-Griffschale		
1 204 051	Magazinverlängerung für verstellbare Griffschale		
1 204 060	Magazinbodenhalter		
1 204 070	Schieber		
1 205 000*	Verstellbare Griffsschalen kompl. mit Schrauben, gemäss UIT für Rechtshänder		
1 205 041	Inbusschraube		
1 205 050	Unterlagsscheibe		
1 205 080	Mutter		
1 205 090	Rosette		
1 205 110*	Verstellbare Griffsschalen kompl. mit Schrauben, gemäss UIT für Linkshänder		
1 205 250	Griffschale klein, für Rechtshänder kompl. mit feststehender Handauflage		
1 205 280	Griffschale klein, für Linkshänder kompl. mit feststehender Handauflage		
1 206 020	Inbusschlüssel 1,5 mm		
1 206 030	Inbusschlüssel 4,0 mm		
1 206 040	Schraubenzieher		
1 206 050	Durchschlag		
1 206 110	De Luxe Koffer für Pistole Mod. 208/215 ausgezeichnete Verarbeitung und Qualität		
1 206 140	Schraubenzieher		
1 206 150	Putzstock kompl.		
1 206 160	Schraubenzieher		
1 215 000	Standardgriffschale ohne Handauflage kompl. gemäss UIT für Mod. 211 für Rechtshänder und Linkshänder		
1 221 040**	Stift zu Abzugsbügel		
1 222 001**	Verschluss kompl.		
1 222 021**	Verschlussstück		
1 223 000**	Visier kompl.		
1 223 010**	Visierträger		
1 225 000**	Verstellbare Griffsschalen kompl. mit Schrauben, gemäss UIT für Rechtshänder		
1 225 050**	Verstellbare Griffsschalen kompl. mit Schrauben, gemäss UIT für Linkshänder		

English

1 203 030	Visierblatt 3,2 mm		Standard
1 203 040	Visierblatt 3,6 mm		
1 203 050	Visierblatt 4,0 mm		
1 203 230	Visierblatt 4,2 mm		
1 203 240	Visierblatt 4,4 mm		
1 203 060	Visierblatt 3,2 mm		
1 203 070	Visierblatt 3,6 mm		
1 203 080	Visierblatt 4,0 mm		
1 204 000	Magazin compl. for Standard-Griffschale		
1 204 001	Magazin compl. for verstellbare Griffschale		
1 204 010	Magazinfeder		
1 204 031	Zubringter		
1 204 050	Magazinverlängerung für Standard-Griffschale		
1 204 051	Magazinverlängerung für verstellbare Griffschale		
1 204 060	Magazinbodenhalter		
1 204 070	Schieber		
1 205 000*	Verstellbare Griffsschalen kompl. mit Schrauben, gemäss UIT for Right handed shooters		
1 205 041	screw		
1 205 050	washer		
1 205 080	nut		
1 205 090	foundation		
1 205 110*	adjustable grips compl. with screws, according to UIT for left handed shooters		
1 205 250	target grips small, for right handed shooters compl. with fixed palm rest		
1 205 280	target grips small, for left handed shooters compl. with fixed palm rest		
1 206 020	allen key 1,5 mm		
1 206 030	allen key 4,0 mm		
1 206 040	screw driver		
1 206 050	flat punch		
1 206 110	De Luxe carrying case for mod. 208/215 excellent quality and execution		
1 206 140	screw driver		
1 206 150	cleaning rod compl.		
1 206 160	screw driver		
1 215 000	standard grips without hand-support for mod. 211 for right handed and left handed shooters		
1 221 040**	pin for trigger guard		
1 222 001**	breech compl.		
1 222 021**	breech		
1 223 000**	rear sight compl.		
1 223 010**	support for rear sight		
1 225 000**	adjustable grips compl. with screws, according to UIT for right handed shooters		
1 225 050**	adjustable grips compl. with screws, according to UIT for left handed shooters		

Garantie

Für jede Hämmerli Sportpistole leisten wir eine Garantie für 12 Monate, für alle Fabrikations- oder Materialfehler. Die Garantie erlischt bei unsachgemässer Behandlung, unfachmännischen Reparaturen oder Änderungen der Waffe. Die uns zugestellten Waffen werden nach erfolgter Instandstellung per gewöhnlicher Post zu unseren Lasten an den Besitzer zurückgesandt.

Technische Änderungen vorbehalten.

Garantie

Chaque pistolet de sport Hämmerli est livré avec une garantie de 12 mois contre tout vice de fabrication ou de matériel. La garantie s'éteint en cas de manipulation incomptétente, de réparation par une personne non qualifiée ou de modification de l'arme. Les armes qui nous parviennent seront réexpédiées au propriétaire par poste ordinaire, à nos frais, après remise en état.

Modifications techniques réservées.

HÄMMERLI

Sportwaffenfabrik
CH-5600 Lenzburg (Schweiz)
Tel. 064/50 11 44
Telex 981 331 hile ch

D-7890 Waldshut-Tiengen 2
Tel. 07741/50 51
Telex 7 921 400 hiti

HÄMMERLI

Target-Arms
CH-5600 Lenzburg (Switzerland)
Phone 064/50 11 44
Telex 981 331 hile ch

HÄMMERLI
Fabrique d'armes pour le sport
CH-5600 Lenzburg (Suisse)
Tél. 064/50 11 44
Télex 981 331 hile ch

English

Español

Guarantee

We give a guarantee of 12 months with every Hämmerli target pistol in respect of faulty material or manufacture. This guarantee loses its validity if the weapon has been improperly treated, inexpertly repaired, or altered in any way. Weapons sent in to us are returned post-free by ordinary mail after overhauling and repairing.

Technical changes reserved.

Garantía

Para cada pistola de deporte Hämmerli damos una garantía por doce meses, referente a todos los defectos de fabricación o del material. La garantía caduca en caso de tratamiento inadecuado, de reparaciones ejecutadas de manera no perita, o de alteraciones resp. modificaciones del arma. Las pistolas enviadas a nosotros, después de efectuada la reparación, son remitidas al cliente por correo ordinario a expensas nuestras.

Nos reservamos el derecho de introducir modificaciones técnicas.

HÄMMERLI

Fábrica de armas de Deporte
CH-5600 Lenzburg (Suiza)
Tel. 064/50 11 44
Telex 981 331 hile ch