


IZH-46M Firing Seal Replacement Tool

Use to Install Seal ("Locking Piece", #31) From Rear of Pistol

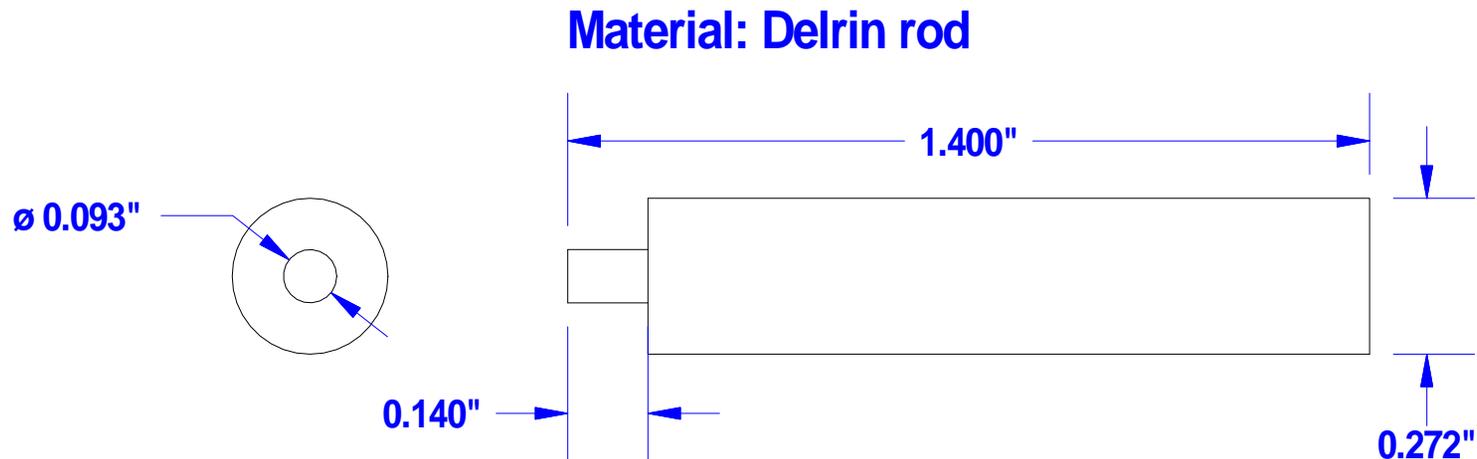

- 1) Disassemble pistol, removing breech block assembly & valve parts
- 2) Drive out small cross pin (#69) below firing port
- 3) Remove "Bushing" (#32) from rear of pistol
- 4) Extract old seal. A plastic 3.25 mm crochet hook could work well
- 5) Oil new seal & install it on end of tool, with groove facing forward
- 6) Insert slowly into action. Be careful that seal doesn't hang up on firing port. You may have to use a toothpick to coax the seal past the port.
- 7) Seat the seal onto the beveled end of the "Valve Seat" (#30)
- 8) Withdraw tool (hopefully leaving seal in place)
- 9) Reinstall "Bushing" (#32) and cross pin.
- 10) Reassemble & test fire